



INSTALLATION TEMPLATE

IMPORTANT


This product must be mounted a wood stud wall, or into solid concrete. For solid concrete installation start with Step 3.

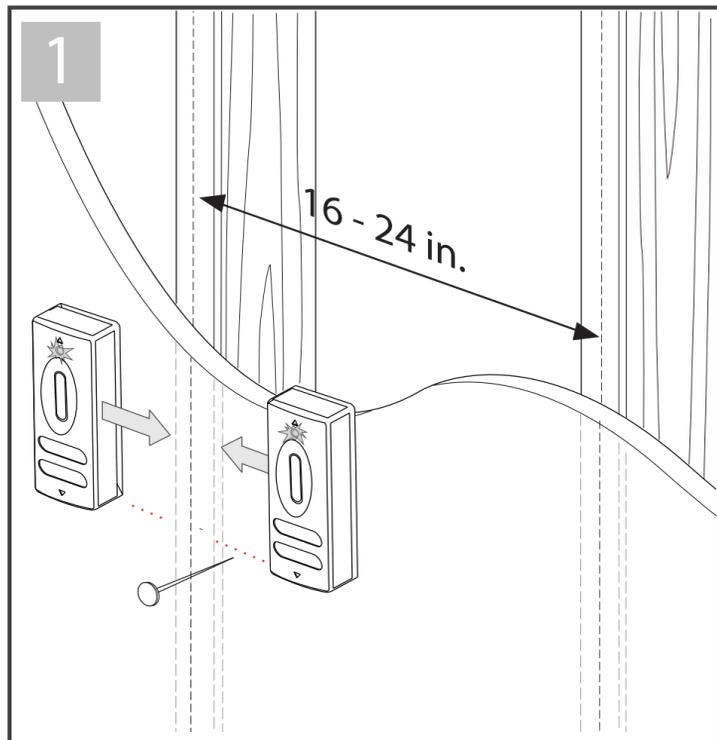


Step 1: Use the stud finder/level by pressing against drywall and holding down button. Slowly slide the stud finder/level left and right until red LED begins to blink. This will indicate the edge of your wood stud. Locate and mark the edges of two studs (16" apart) in the desired panel location. You may verify the outside edge of the studs by tapping a thin nail through the drywall until the edge of wood stud is located.

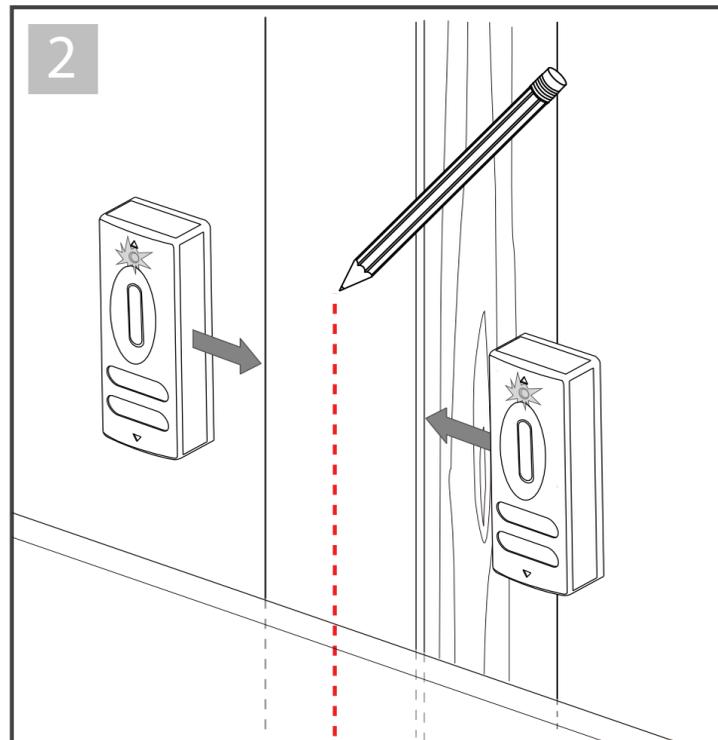

Step 2: Once the edges of the stud have been determined, find the center point between the two edges and mark a short vertical line to indicate the center of your stud.

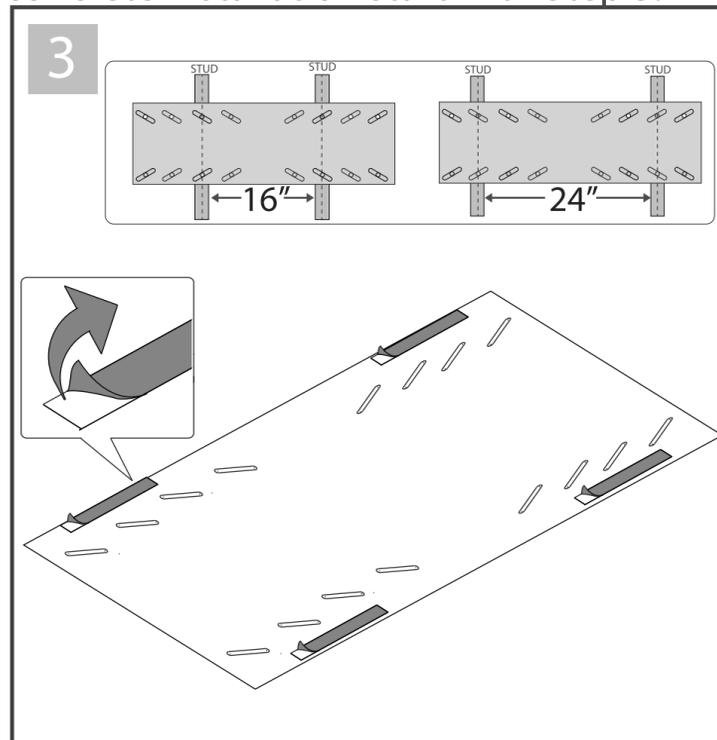


Step 3: Once you have found your desired panel location expose the adhesive on reverse side of template.

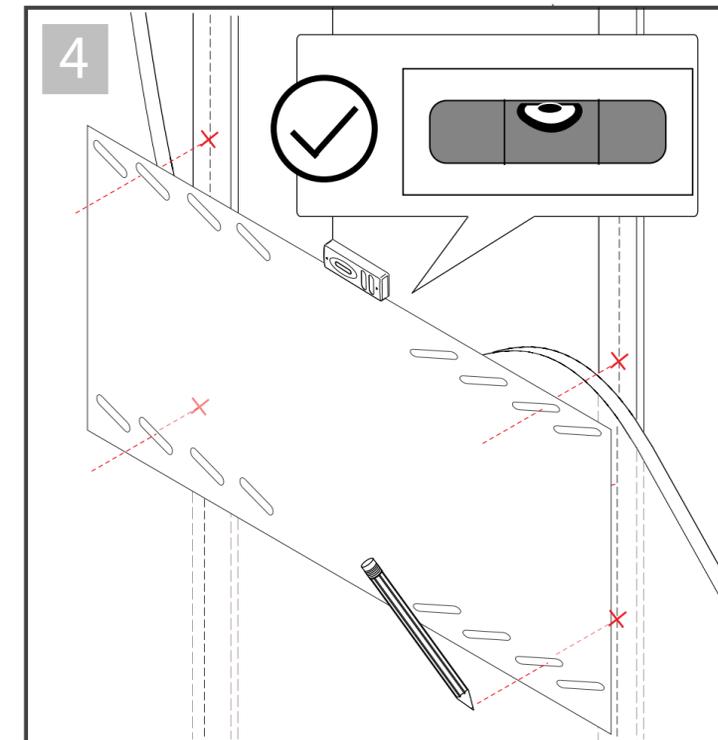

Step 4-1: For solid concrete installation, level template and press firmly into place at desired location. For wood stud installation hold template level and align center line slots with vertical marks on wall indicating the center of studs. Once the installation template is aligned with both stud centers and level, press firmly into place.

Step 4-2: Mark four mounting locations to align with center of studs or directly onto concrete wall. Use one top and one bottom centerline slot per side of installation template as shown below.

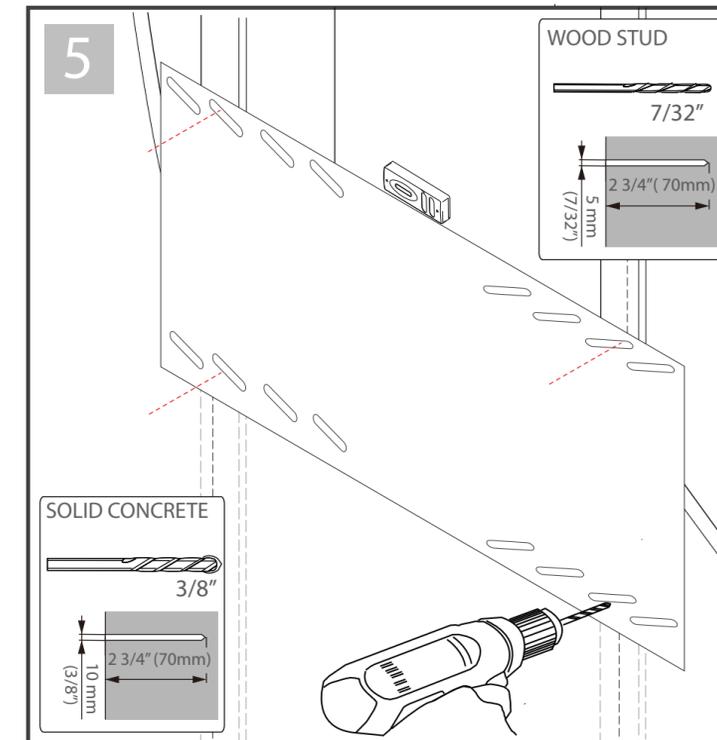

Step 5: Drill pilot holes as shown using appropriate drill bit.

WOOD STUD DRILL: 7/32" (5mm) Drill Bit
SOLID CONCRETE DRILL: 3/8" (10mm) Drill Bit

Remove template from wall and discard in recycle container. Refer to instruction manual to complete installation.

Reduce.Reuse.Recycle.

PN:777-61-016-G-00 revA

